



Shadow Ultra Low Glare (Remote) 1.5kW, 2.0kW & 3.0kW Infrared Patio Heater

Safety Instructions and Operational Manual

Unit 9, Stort Valley Industrial Estate
Stansted Road, Bishop's Stortford
Hertfordshire, United Kingdom
CM23 2TU

Available at
www.heat-outdoors.co.uk
01279 466500
info@heat-outdoors.co.uk

Important Safety Instructions

Thank you for purchasing from Heat Outdoors. Please read these instructions carefully before using your heater, and pay special attention to the "Important Safety Instructions" . This product is an infrared radiant heater with a remote control and is IP65 approved for full outdoor use.

- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or injury to persons, etc. Read all instructions before using this heater
- Keep combustible materials ,such as furniture, pillows ,bedding , papers, clothes and curtains at least 0.9m from the front of the heater.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Turn off the electricity ,remove the plug from the outlet when not in use.
- Do not try to repair yourself when the unit is broken (such as cord, plug etc), please contact the service agent for maintenance advice .
- Arrange cord away from any traffic area and where it will not become a hazard/ caution to users.
- Connect to properly earthed outlets only. To disconnect heater, turn socket off, then remove plug.
- Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet. It is not advised to use with an extension cord or relocatable power tap (outlet/power strip). If users decide to use with extension lead or relocatable power tap, make sure the current carrying capacity and rated voltage correspond to the relative regulation.
- Check if the voltage indicated on the nameplate of the appliance corresponds to the local mains voltage before you connect the appliance.
- The appliance is not to be located directly below an electrical wall socket.
- The casing and the front cover of the appliance may become extremely hot during operation. Please ensure that in wind or adverse weather conditions no combustible material or covers obstructs the appliance, such as curtains, marquees, flags, plastic etc do not touch the appliance.
- Do not touch the appliance. Caution! Risk of scald injury!
- In case of improper use, there is a risk of electrical shock and/or fire hazard. Operation of the appliance must be discontinued and remove the mains plug immediately. Do not try to repair the appliance by yourself. Please contact with the service agent or a suitably qualified electrician for maintenance.
- Remove the plug from the power outlet and wait until the appliance is sufficiently cool before cleaning.
- Keep out of reach of children. In order to keep children from the dangers of electrical appliances, never leave them unsupervised with the machine.
- The appliance must only be mounted by an authorized specialist, paying attention to the relevant regulations of the power supply companies and the regional construction regulations.

Operation Instructions

- Remove all packaging material (including anti-vibration packaging on the lamp) and check the appliance, supply cord and plug for signs of damage.
- Before mounting, note the minimum safe mounting distances and tilt angles as shown in the below must be strictly followed.
- The distance between the bottom edge of the appliance and the floor must be at least 1.8 M. See figure 3.
- There must be a distance of at least 0.4 M between the appliance and the ceiling, roof or other covers. See figure 3.
- Recommended angle to mounting surface is 45°. See figure 4.
- Fix the mounting bracket on the wall first. Ensure that the place to be installed is secure and firm. Or connect the appliance to a suitable floor stand.
- Adjust the desired angle and tighten the hex bolt on the hinge. Regularly the screws' connection. Mechanical pressures and oscillation due to wind or rain can cause your fixing to work loose.
- Plug into a suitable power source and operate the via the remote control handset
- When not in use for long periods, it is advisable to remove the batteries.
- If mounted facing straight down, heaters need to be in a well-ventilated area and must be at least 0.5M away from any ceiling or obstructions to the airflow above them. This is especially relevant to heaters that are suspended on chains and wires.

Specifications

Voltage (V)	□ 220-240~
Power consumption (W)	□ 1500W □ 2000W □ 3000W
IP	□ IP65
Infrared receiving Angle	□ 60°±5°
The control distance(M)	□ 6
Battery type	2 x AAA size1.5V

Remote Control Instructions

	Button	Graphic	Feature
	Up Arrow		Increase heating level
	Max		The heater goes directly to the highest heating level.
	Down Arrow		Decrease heating level
	On		To switch the heater on: Press ON. The patio heater has a soft start function of 33% power. 4 seconds after the heater has been turned on, it will automatically switch to the last heating level used. In case of the first-time use, after 4seconds the heater will automatically switch to 100% power.
	Off		To switch the heater off: Press OFF. The heater will switch to standby mode (the receiver indicator will light up).

Please Note:

- Use 2 pieces AAA size 1.5V batteries in the remote control. Remove the battery when not use for long time, thus the lifespan of remote control can be extended.
- Choose the same specification battery when replacing the battery inside, otherwise it may cause remote control not work, thereby affect the normal use of the heater.
- The heater can be still used in normal except remote control function if the remote control is missed or lost. Please contact service agent for further help if you need the function.
- The remote control function may be out of work if there is a barrier between the remote control and heater.
- Replacing the batteries duly so as not to affect the normal use of heater and remote control.

Symbols for the 3-way switch control indicate the following:

- O. OFF
- (i). Remote function activated.
- (ii). Remote function override.

Mounting

Figure1: Mounting bracket (wall bracket) and anchor dowels provided. Connection from the wall to the infrared heater.



Figure 2: Connection from the stand to the infrared heater. The stand shall be purchased separately.



Figure3: Min. distance to floor, ceiling and wall.


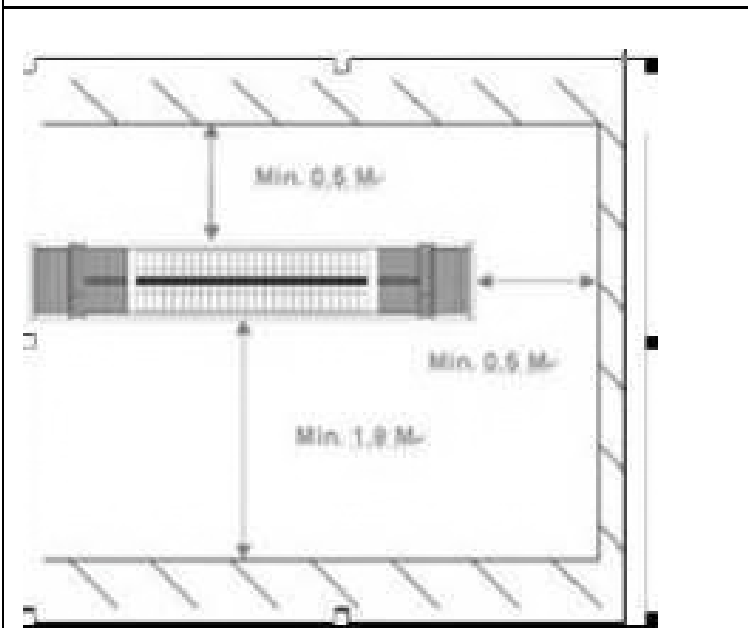


Figure 4: Tilt angle

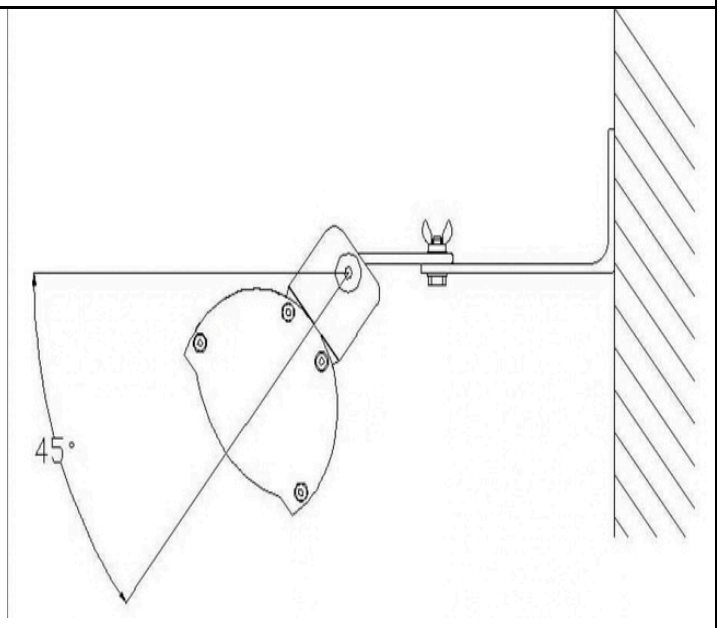

Cleaning and Maintenance

- This appliance is consist of a robust and maintenance-free aluminum casing with a protection cover. No user serviceable parts inside.
- Before cleaning,remove the plug from the power outlet and wait until the appliance is sufficiently cooled.
- Wipe the appliance only with clean with a lint-free cloth or a soft brush.
- Never use abrasive cleaners, scrubbing brushes and chemical cleaners for cleaning!
- Alcohol can be used to clean the appliance.
- To protect against electrical shock and danger of life, do not immerse cord, plug, or any part of the appliance in water or other liquid.
- For heating element replacement ,please contact the manufacturer or its service agent or a similarly qualified person.
- Any other service, please contact with the service agent or a suitably qualified electrician

Disposal



In accordance with European Directive 2001/96/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE), please return any electrical equipment that you will no longer use to the collection points provided for their disposal.



This symbol indicates that the appliance cannot be treated as normal domestic trash, but must be handed to a collection point for recycling electric and electronic appliances. Information concerning where the equipment can be disposed of can be obtained from your local authority.

Customer Service

- Repairs must be carried out by authorized specialists, thus ensuring electrical safety.
- Please contact the service agent or a suitably qualified electrician.
- Improper repairs could lead to danger to the user.
- This warranty does not cover damage of failure which results from alteration, accident, misuse, abuse, neglect, commercial use or improper maintenance.
- In line with our policy of continuous product development we reserve the right to change the product and documentation specifications without notice.