



Shadow Tripod Patio Heater Stand

Safety instruction and Operational Manual

Product Code - 901205T

HEAT
outdoors

Heat Outdoors
Unit 9, Stort Valley Industrial Estate
Stansted Road, Bishop's Stortford
Hertfordshire, United Kingdom
CM23 2TU

www.heat-outdoors.co.uk
01279 466500
info@heat-outdoors.co.uk

IMPORTANT SAFETY INSTRUCTIONS

Before using the upright, read carefully the instructions contained in this booklet, which furnish important information regarding installation, use and maintenance safety. The booklet must be kept and delivered to the new user in case of cession of the machine.

1. The upright is intended exclusively for the use for which it was created, that is the mounting of "Fiore" heater, and the producer would not be considered responsible for any damage caused by its improper use.
2. After unpacking, make sure that the appliance is complete and shows no signs of visible damage or tampering.
3. Keep packing materials, which are potential dangers, away from children (plastic bags, styrofoam packing pellets, nails, etc.).
4. The upright is not suited for persons (as well as children) physically, mentally, sensory disabled, or with no experience, unless they have been supervised or directed by someone responsible of their safety.
5. Do not bring modifications to the product that compromise the safety.

LOCATION (WITH "FIORE" HEATER)

- The upright must lean on a horizontal surface and the ground must be stable and solid.
- Fix the screw anchor on the ground at the chosen point.
- Open the feet almost to reach the white line on the bottom of the tube.
- Hook the ring of the chain to the screw anchor.
- Open the upright until the junction of the feet reaches the white line, tightening the chain (fig.1).
- For fixing the heater, use the bracket with the omega hooks (art.768P - provided separately). The upright bracket is studied for holding one appliance or two of them in opposite position (please see fig.2).
- The heaters should always be installed horizontally only using the mounting brackets provided. This ensures correct positioning and adequate clearance.
- The heater should be mounted at a minimum of 180 cm above ground level (fig.3).
- A minimum air gap of 40 cm should always be allowed between the top of the heater and a ceiling or roof. The appliance should be 60 cm far from the walls (fig.3).
- A safety distance of not less than 100 cm should always be left in front of the "Fiore" heater or too near.
- Be sure that the heater is not facing the ceiling or inflammable substances.



For the assembly and the installation of the "Fiore", follow the rules in the instructions booklet of the heater.

